


E3127 J&D VC012 Thermostat / cooling wiring



Cooling: Connect red wire to middle terminal.

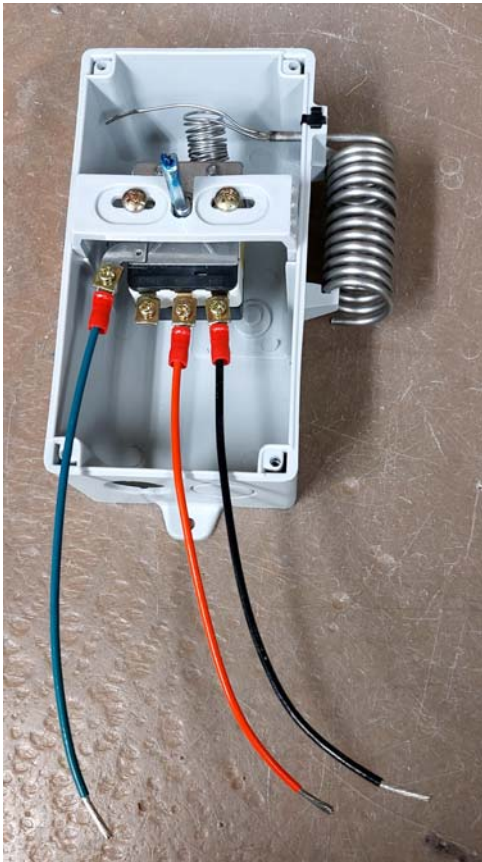

Fan (cooling) wiring completed.

Cooling wiring:
Connect green to green
black to black
red to white



If thermostat dial is off more than 4° F, re-set dial. Loosen set screw 1½ turns, and rotate set point to correct position.

Type VC012

Temperature regulating equipment

E357053

Enclosure for indoor use. UL50 Type 2
Boîtier pour l'utilisation intérieur.

Protection against falling dirt, dripping and light
splashing water.
Protégé contre la poussière et les projections
d'eau.

Electric specifications for each contact set as
specified in table.
Caractéristiques électriques pour chaque contact
comme spécifié dans le tableau.

Use supplied wires to connect thermostat.
Branchement du thermostat avec les fils fourni.

Wiring Diagram:
Schéma de branchement:

Line IN / Black wire
L entrée / Fil noir
Cooling / Red wire
Refroid / Fil rouge
Heating / Yellow wire
Chauff / Fil jaune
Ground / Green wire
Terre / Fil vert

Contacts	Rating Charge max.	V.A.C. 50 or 60 Hz. Volts ac 50 ou 60 Hz.	
		120	240
Cooling & Fan Refroidissement & ventilateur	Resistive load non inductive, AMP Charge non inductif (A)	16	16
	FLA. Full oad. AMP @PF 0.7 Charge max. (A) Cos φ 0.7	12	10
	LRA. Locked rotor AMP Avec rotor bloquant (A)	48	40
	Pilot duty, VA Charge nominal (VA)	120	
	Heating Chauffage	Resistive load non inductive, AMP Charge non inductif (A)	16
Heating Chauffage	FLA. Full oad. AMP @PF 0.7 Charge max. (A) Cos φ 0.7	8	6
	LRA. Locked rotor, AMP Avec rotor bloquant (A)	32	24
	Pilot duty, VA Charge nominal (VA)	120	

Q&A for Hard-Wire Fan and Pre-Wired Fan Thermostat:

Question: So I hooked everything up according to instructions from power supply to thermostat to fan. It works, but it seems to be reversed. When I set the temp to higher, the fan turns off, and when I lower it to below the air temp, it turns on.

Answer: The wiring is correct. This is the correct operation for a cooling fan. The fan should only turn off when the ambient (room) temperature is below the thermostat set point. If you want 85 degrees maximum, set the thermostat for 85 degrees. The fan will turn On at any temperature above 85, and turn off when the room temperature drops below 85 degrees.