
INSTRUCTIONS

ACTIVE AIR®

INDOOR/OUTDOOR HYGRO-THERMOMETER
WITH MAX-MIN DISPLAY



HG10HTJ


HYDROFARM

INSTRUCTIONS

GETTING STARTED

Congratulations on the purchase of your new HGIOHTJ. Our products are packaged and shipped with the utmost care. In the unlikely event that your item is incorrect, incomplete, or unsatisfactory, please contact us and we will resolve any issues immediately. Feel free to contact us with any questions, comments, or concerns at Hydrofarm.com.

- To ensure safety, please read this manual carefully before installation and follow the instructions herein.
- Store this manual in a secure place for future reference.

WARNINGS

- The unit includes a battery. The battery should NOT be opened, discarded in fire, recharged or used improperly. The battery's internal ingredients and their combustion could be harmful.
- Avoid direct contact with water. Failure to do so may result in damage to the

electrical components.

- Although the sensor probe is considered weatherproof, it is not recommended that this probe endure long durations of exposure to direct water contact.

PACKAGING CONTENTS

- Hygro-thermometer with attached 3 meter sensor cable
- One 1.5V AAA battery pre-installed

FEATURES AT A GLANCE

- Jumbo LCD display
- Current temperature and humidity reading with simultaneous display of Max and Min memory
- Auto-switch display between outdoor temperature and indoor humidity
- Easy conversion between °C and °F display
- 3 meter cable with anti-corrosion stainless steel sensor
- Versatile placement options

INSTRUCTIONS

with mounting keyhole and fold-away stand

SETUP AND OPERATIONS

1. Find the battery chamber on the back of the unit. Find the insulation insert that separates the unit and the pre-installed battery. Remove the insulation insert to power the unit. The current readings and the max and min readings of temperature and humidity will be displayed.
2. Press the °C/°F button to select your preferred unit of measure in Celsius or Fahrenheit.
3. The outdoor temperature and indoor humidity readings will be automatically switched every 5 seconds. The function is activated by default with a cycle icon shown on the screen. If you prefer only to display one of the outdoor temperature and the indoor humidity, wait until the preferred reading shows on

the LCD screen, then press the AUTO button to turn off the auto-switch function. The preferred reading will stay and the cycle icon will disappear from the screen. Pressing the AUTO button again will re-activate the function.

4. Press and hold the RESET button to reset the Max and Min readings.

MEASURING RANGE

Indoor Thermometer:

Temperature Range Indoors (C):
-10° to 50° (14° to 122°F)
Resolution: 0.1°
Accuracy: +/-1°

Outdoor Thermometer:

Temperature Range Outdoors (C):
-50° to 70° (-58° to 158°F)
Resolution: 0.1°
Accuracy: +/-1°

Indoor Hygrometer:

Humidity Range: 25% RH - 98% RH
Resolution: 1% RH
Accuracy: +/-3% RH (between 50%-80%), +/-5% RH (<50% or >80%).